




CONTAX 167^{MT}

ASSEMBLING CHART

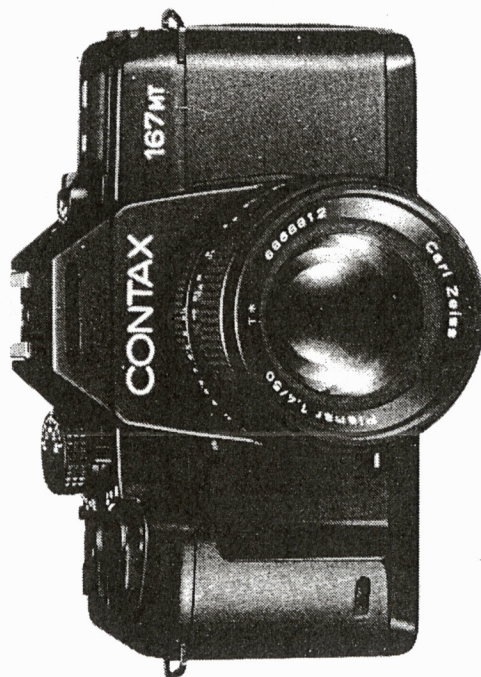


KYOCERA CORPORATION
Optical Equipments Division

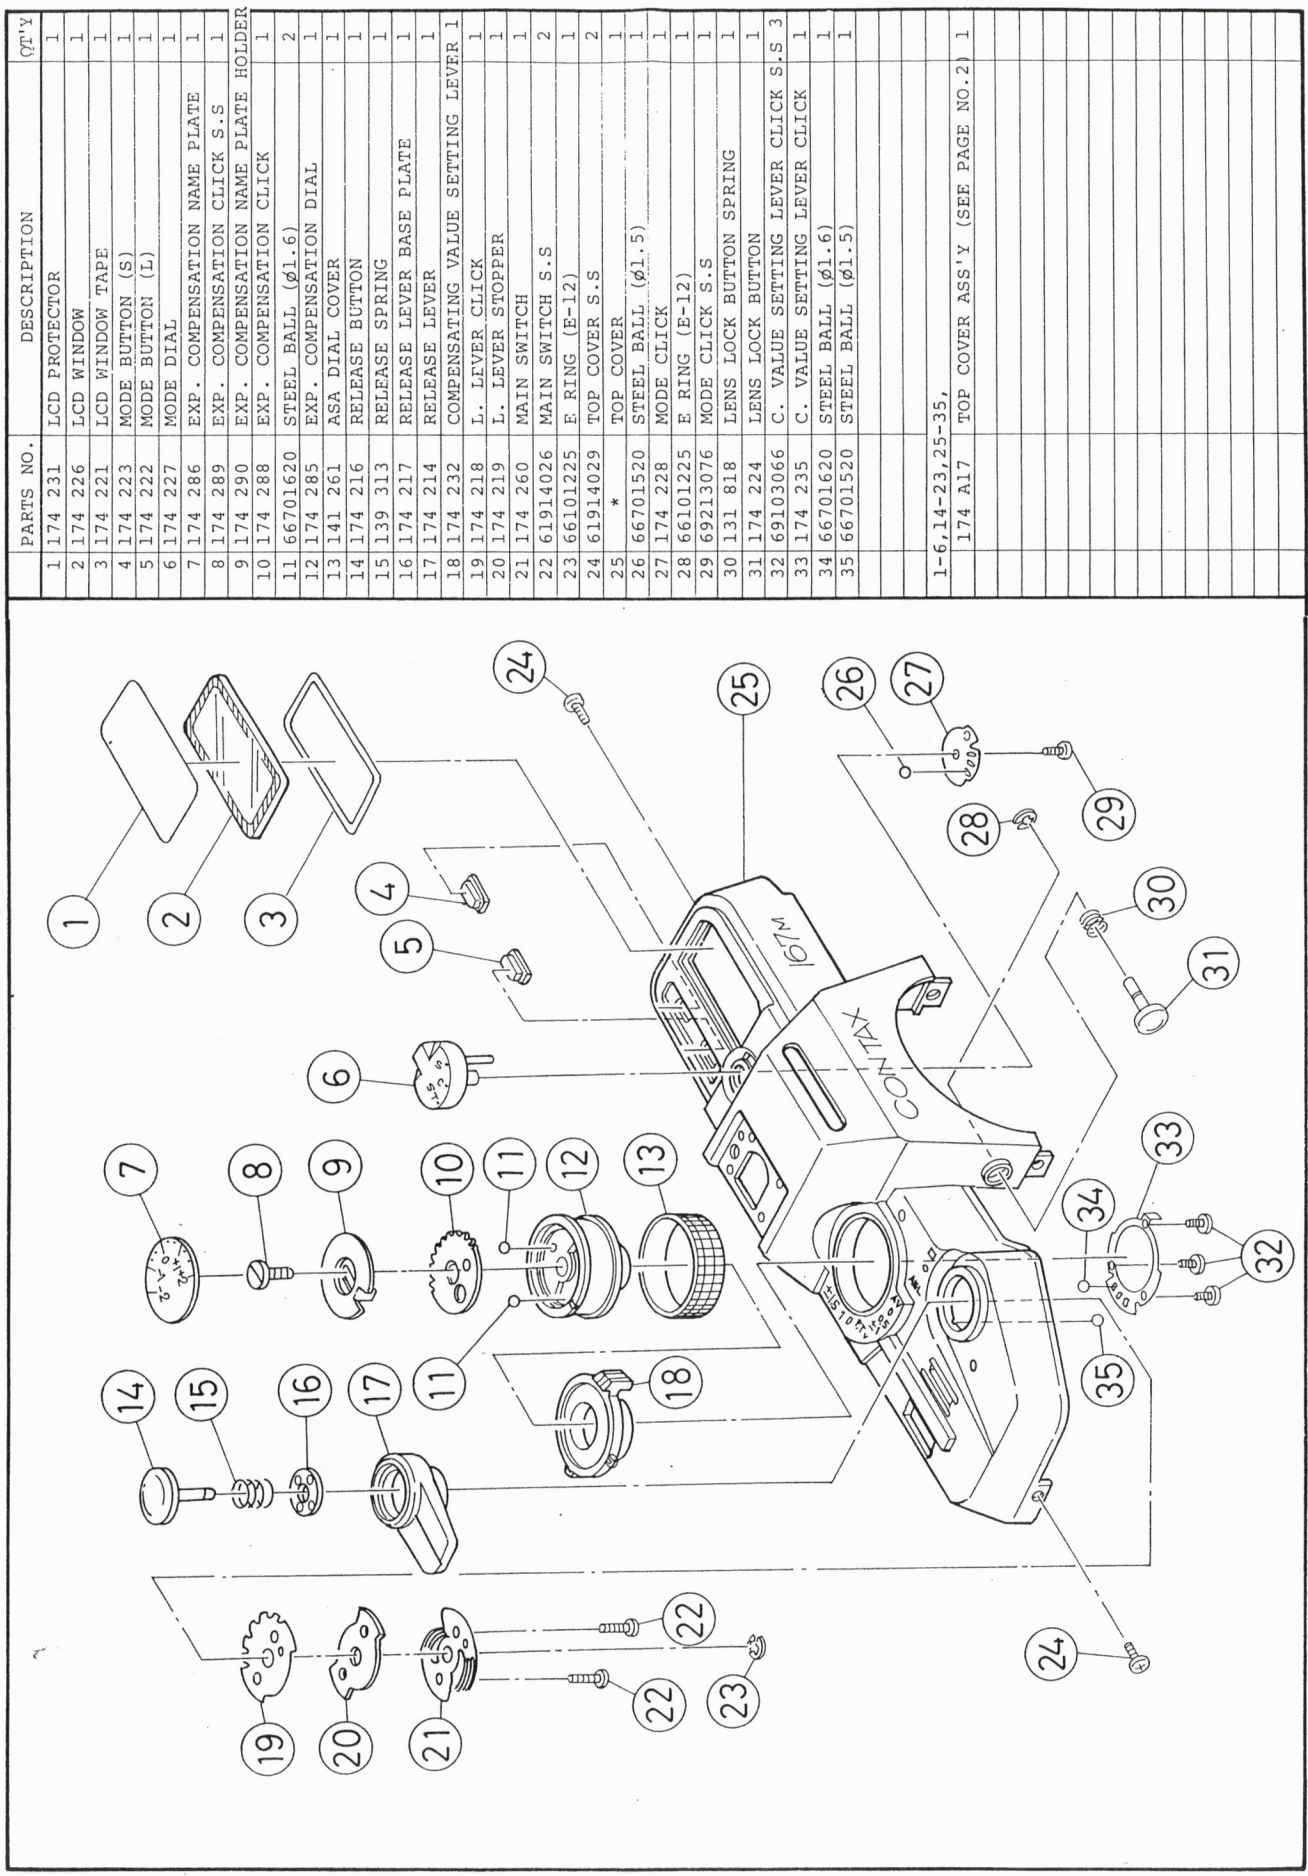

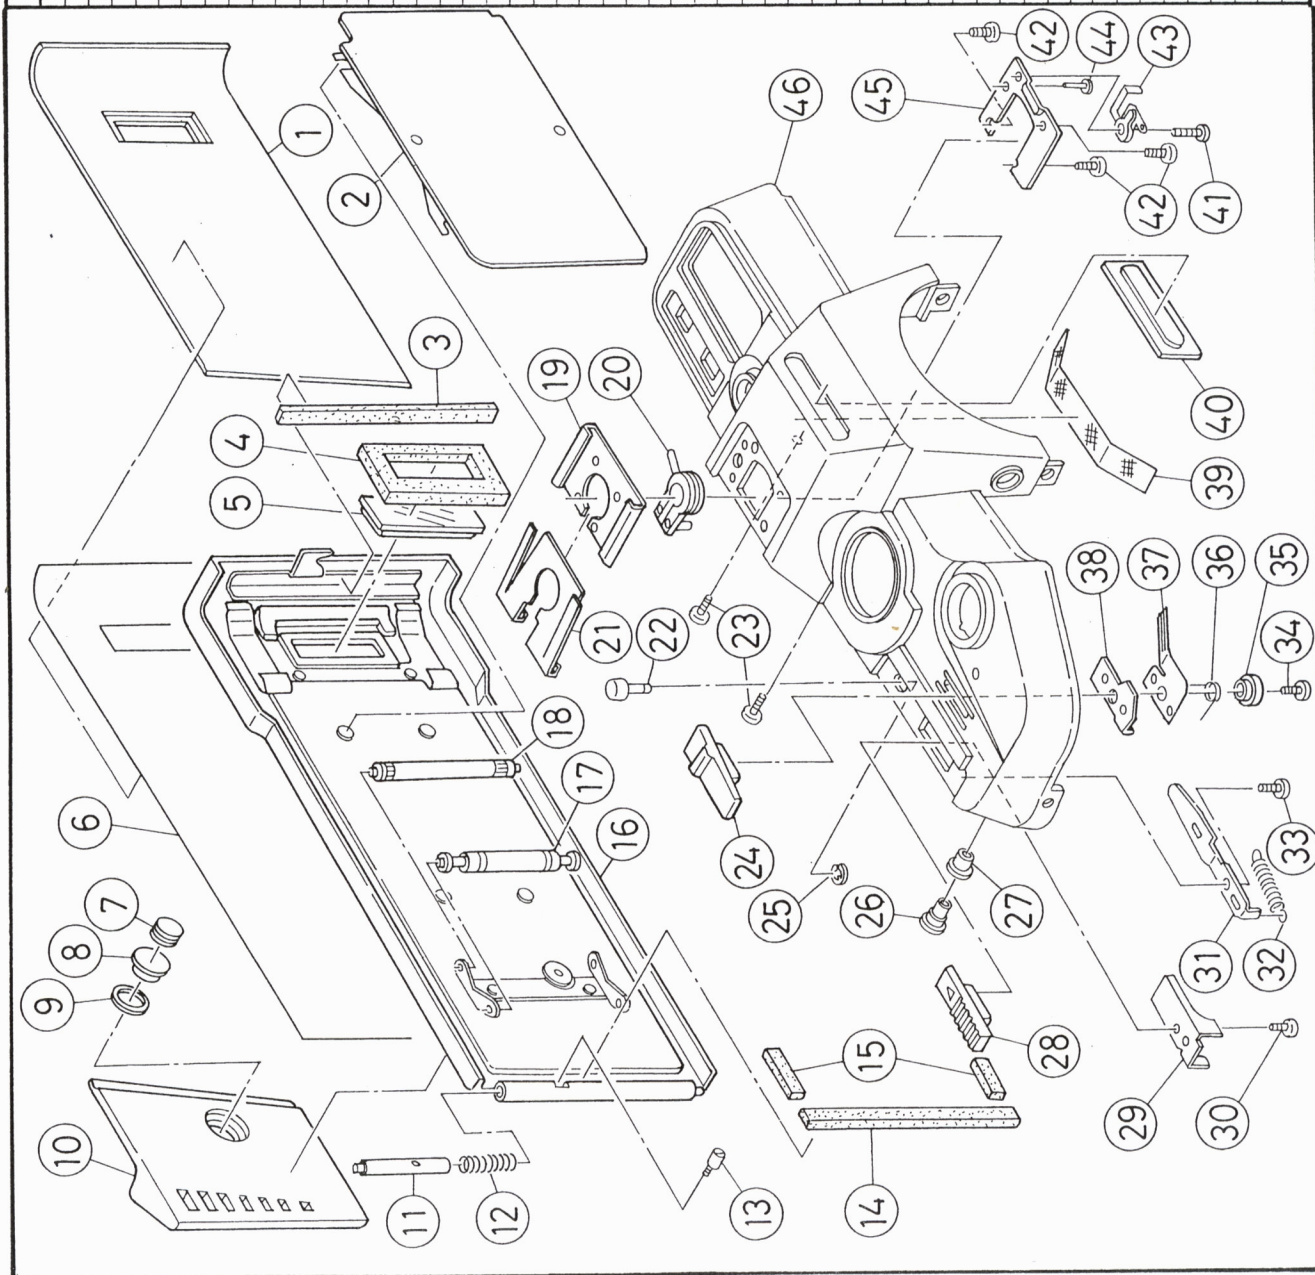



PARTS NO.	DESCRIPTION	QTY
1 174 165	REAR COVER	1
2 174 B92	PRESSURE PLATE ASS'Y	1
3 174 173	LOCK CLAW MOQUETTE	1
4 174 172	FILM CHECK WINDOW	1
5 174 166	FILM CHECK WINDOW	1
6 174 163	BACK COVER TAPE	1
7 157 022	FILM METER ASS'Y	1
8 157 413	FILM METER WINDOW	1
9 174 183	FILM METER COVER	1
10 174 164	REAR GRIP	1
11 131 131	HINGE SHAFT (2)	1
12 174 177	HINGE SHAFT SPRING	1
13 131 132	HINGE SHAFT RELEASE PIN	1
14 174 173	LOCK CLAW MOQUETTE	1
15 174 174	BACK COVER MOQUETTE	2
16 *	BACK COVER	1
17 174 B93	ROLLER ASS'Y	1
18 174 D81	MAGNET ROLLER ASS'Y	1
19 139 169	ACCESSORY SHOE	1
20 065 461	SHOE CONTACT ASS'Y	1
21 139 178	SHOE DRESS PLATE	1
22 174 206	REWIND RELEASE BUTTON	1
23 61912529	TOP COVER S.S.	2
24 174 209	UP/DOWN LEVER	1
25 66101225	E RING (E-12)	1
26 139 165	RELEASE CAP (S)	1
27 139 164	R. SOCKET DECORATING RING	1
28 174 203	REWIND LEVER	1
29 174 204	REWIND LOCK PLATE	1
30 61902526	REWIND LOCK PLATE S.S.	1
31 174 205	REWIND LEVER LOCK SPRING	1
32 174 208	REWIND LEVER SPRING	1
33 63902526	REWIND LEVER LOCK SPRING S.S.	1
34 64104026	UP/DOWN LEVER S.S.	1
35 174 213	UP/DOWN LEVER SPRING SHAFT	1
36 174 212	UP/DOWN LEVER SPRING	1
37 174 211	UP/DOWN SWITCH	1
38 174 210	UP/DOWN LEVER PLATE	1
39 *	ACETATE CLOTH TAPE	1
40 174 202	LIGHTING WINDOW	1
41 61914026	SHOE CONTACT PLATE S.S.	1
42 61913022	SHOE CONTACT PLATE S.S.	3
43 174 230	SHOE CONTACT PLATE (1) ASS'Y	1
44 139 176	SHOE CONTACT PLATE PIN	1
45 139 180	SHOE REINFORCEMENT PLATE	1
46 *	TOP COVER	1
1-18,		
174 A20	BACK COVER ASS'Y	1
19-22, 24, 25, 28-46,		
174 A17	TOP COVER ASS'Y (SEE PAGE NO.1)	1

PARTS NO.	DESCRIPTION	QTY
1 174 125	TRIPOD HOLDER	1
2 61925026	TRIPOD HOLDER S.S	4
3 61914029	FRONT COVER S.S	2
4 174 185	FRONT COVER	1
5 61913026	FRONT COVER S.S	2
6 174 187	APERTURE BUTTON SPRING	1
7 174 188	APERTURE BUTTON	1
8 66101225	E RING (E-12)	1
9 174 781	FRONT SEAL (RIGHT)	1
10 137 184	TRIPOD HOLDER SHEET	2
11 61912526	FRONT PLATE S.S	1
12 174 108	FRONT PLATE (RIGHT)	1
13 61912526	FRONT PLATE S.S	1
14 61912526	FRONT PLATE S.S	2
15 174 186	APERTURE BUTTON HOLDER	1
16 63902526	APERTURE BUTTON HOLDER S.S	2
17 174 782	FRONT SEAL (LEFT)	1
18 174 150	FRONT PLATE (LEFT)	1
19 174 151	SELF-TIMER WINDOW	1
20 61913526	SIDE COVER (L) S.S	2
21 174 152	SIDE COVER (L)	1
22 174 162	SIDE COVER TAPE	1
23 174 153	SIDE COVER (S)	1
4, 6-9, 15-17, 174 A19	FRONT COVER ASS'Y	1
18, 19, 174 A18	FRONT PLATE (LEFT)	1

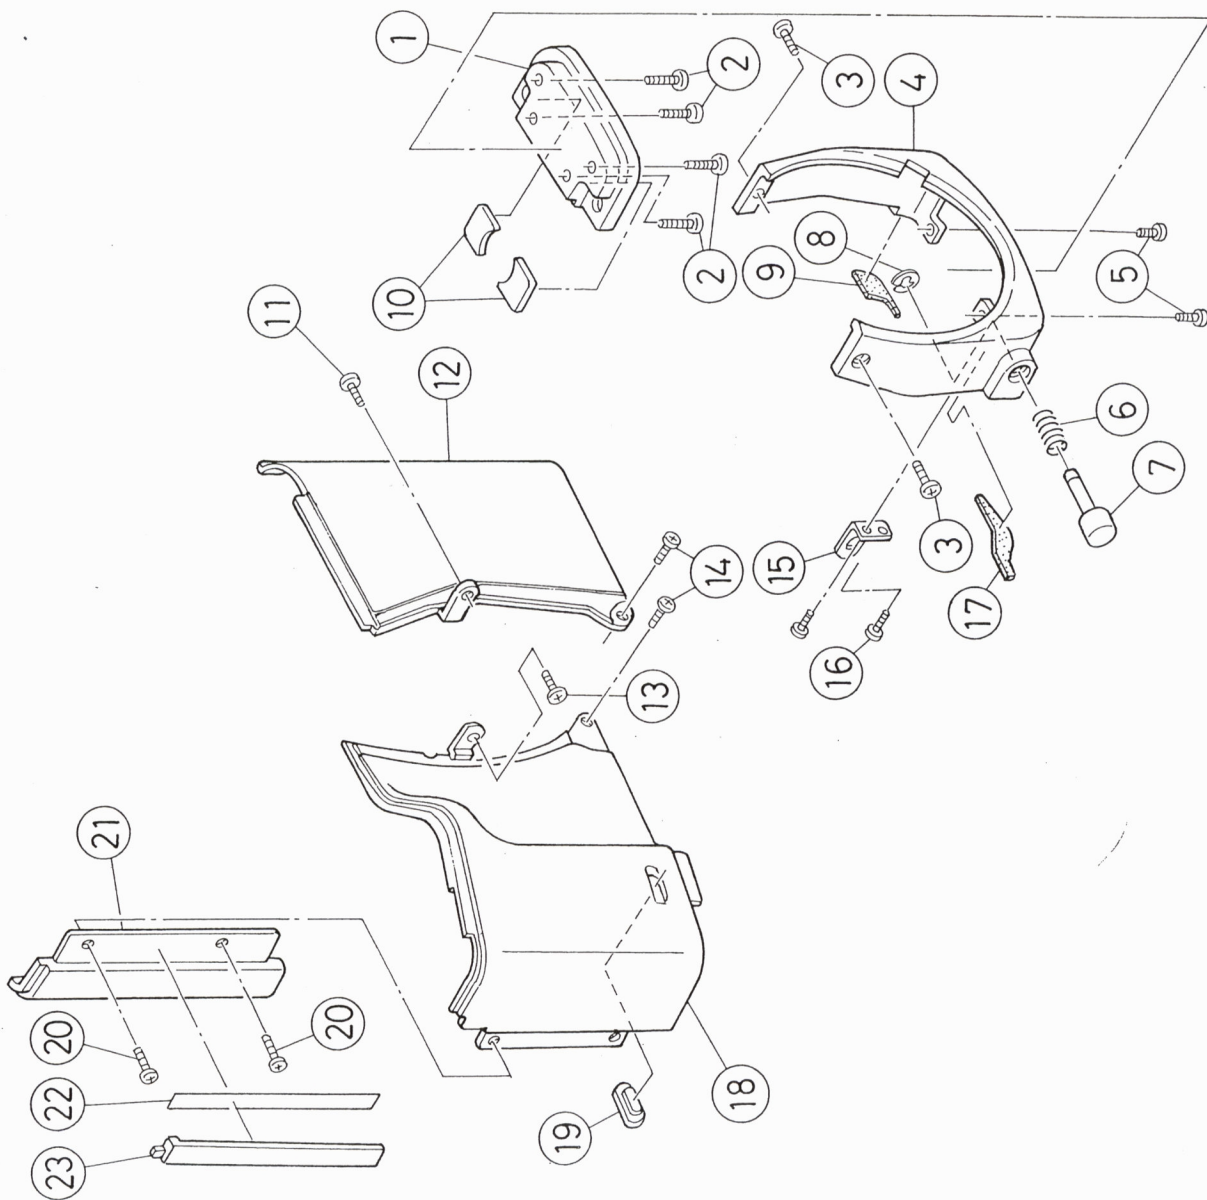


PARTS NO.	DESCRIPTION	QTY
1 63913526	CONTACT RUBBER (S) S.S	2
2 174 130	CELL CASE (S)	1
3 174 992	CONTACT PLATE (S)	1
4 174 993	CONTACT RUBBER (S)	1
5 63912026	FPC-2 S.S	1
6 174 123	RESET BUTTON	1
7 174 A09	FPC-2 ASS'Y (SEE PAGE NO. 8)	1
8 174 135	D.B FLEXIBLE COVER	1
9 66001068	D.B FLEXIBLE COVER S.S	2
10 *	DOUBLE ADHESIVE TAPE	1
11 61912529	CELL CASE (S) S.S	1
12 174 198	BOTTOM COVER S.S	1
13 61914026	CELL CASE (S) S.S	2
14 174 199	BOTTOM COVER S.S STOPPER	1
15 137 131	DIODE	1
16 174 191	BOTTOM COVER	1
17 174 132	CELL CONTACT (S)	2
18 174 124	RESET BUTTON FLEXIBLE	2
19 174 127	BOTTOM COVER S.S HOLDER	1
20 *	DOUBLE ADHESIVE TAPE	1
21 174 126	TRIPOD SOCKET	1
22 63903029	CELL HOLDER S.S	3
23 174 129	CELL HOLDER	1
24 *	BATTERY (1.5V AAA-SIZE)	4
25 174 133	CELL CONTACT (L)	1
26 174 190	BOTTOM COVER SEAL	1
27 174 196	BOTTOM COVER PROTECTOR	1
28 *	ACETATE CLOTH TAPE	1
29 174 134	HOLDER PLATE	1
30 *	ACETATE CLOTH TAPE	1
31 174 131	CELL CASE (L)	1
32 *	BODY	1
16, 26, 27,		
174 A21	BOTTOM COVER ASS'Y	1
15, 17, 22, 23, 25, 28-31,		
174 A13	CELL CASE (L) ASS'Y	1

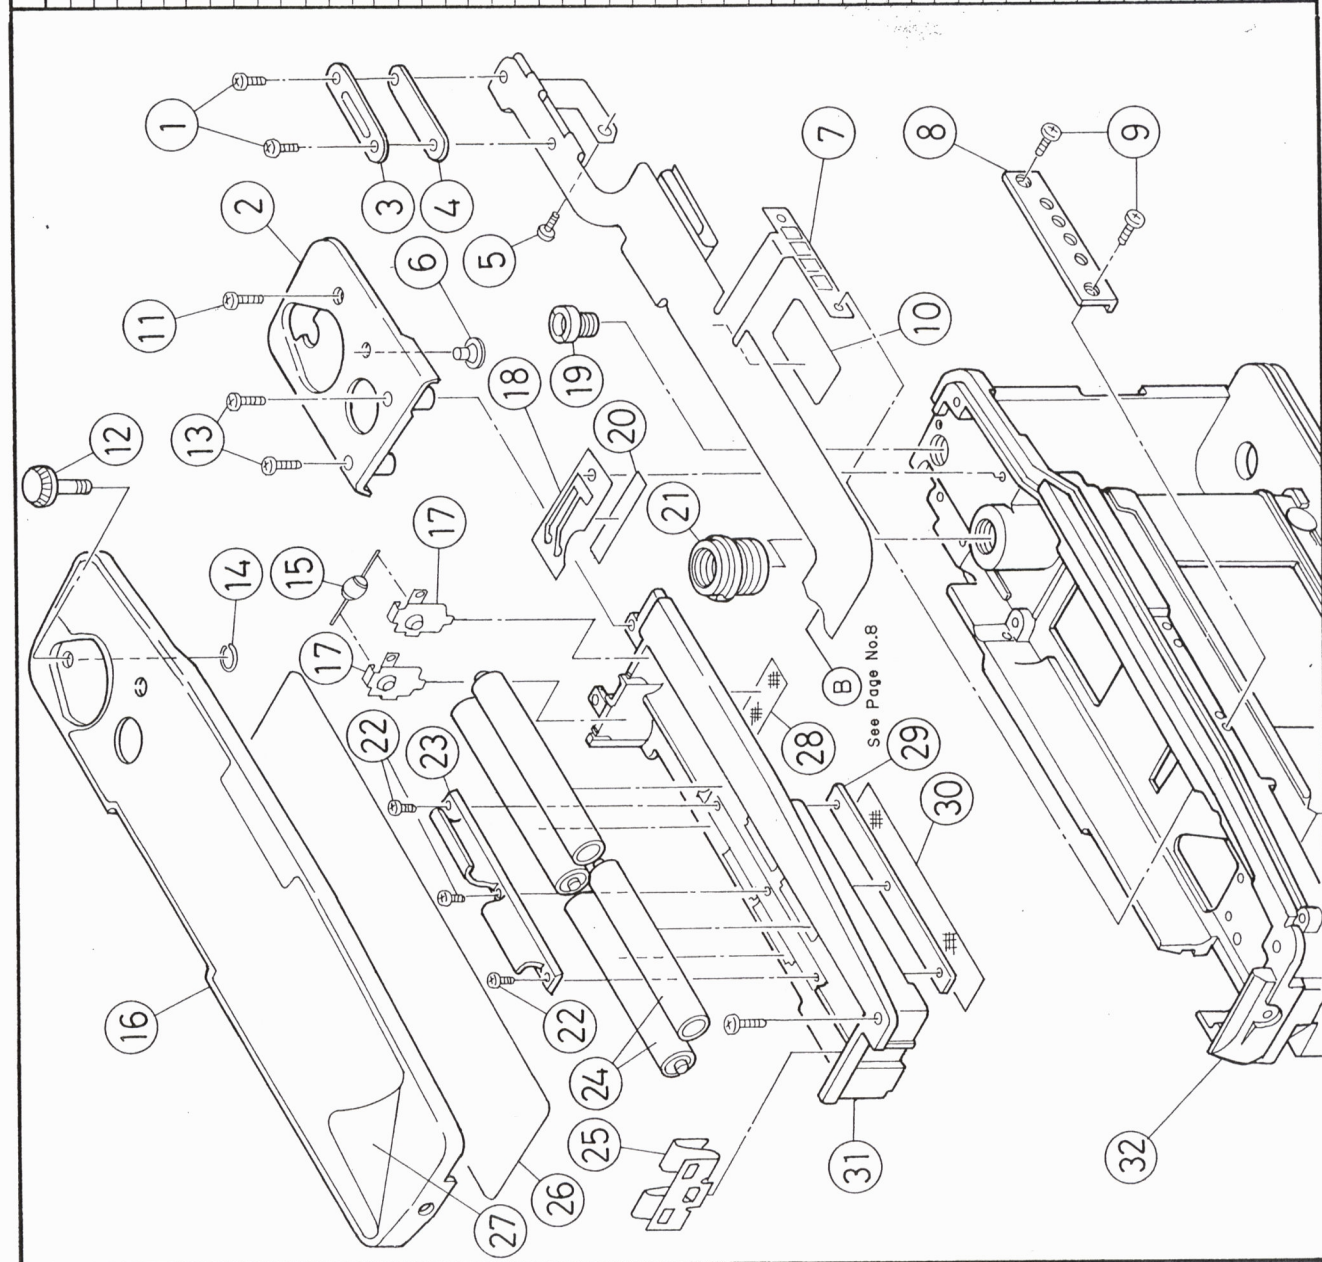

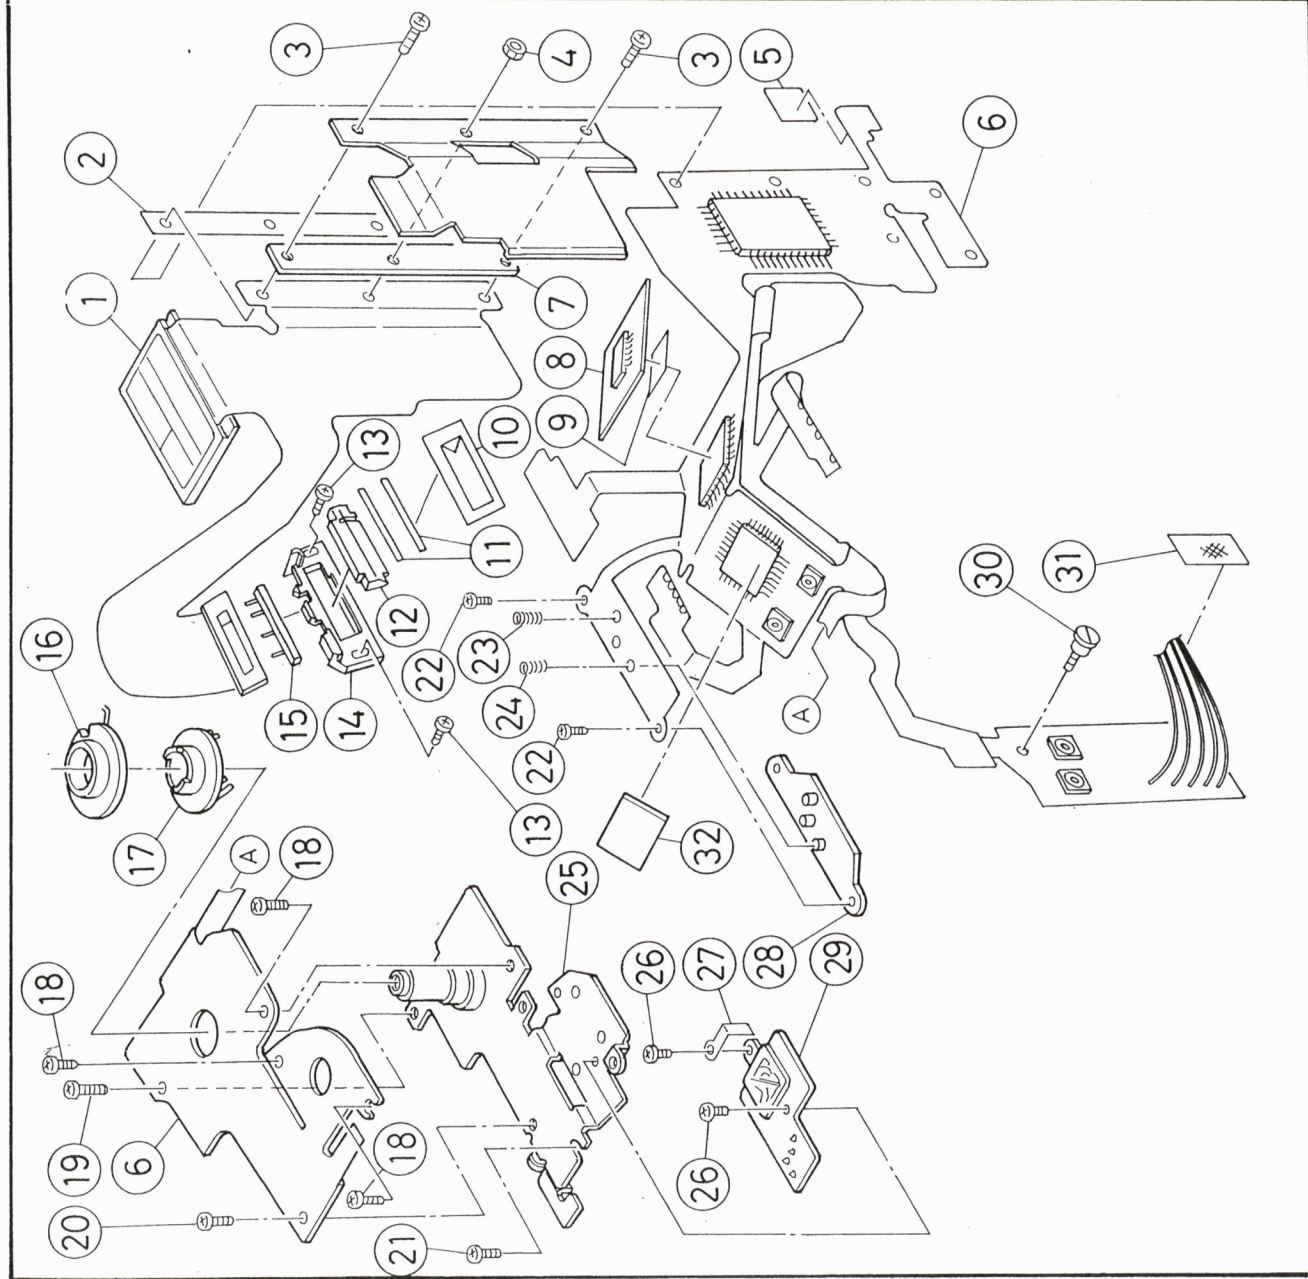


PARTS NO.	DESCRIPTION	QTY
1 174 509	LCD ASS'Y	1
2 174 990	R CONTACT (L)	1
3 63913526	CONTACT PLATE (L) S.S	2
4 66511722	CONTACT PLATE (L) NUT	1
5 *	DOUBLE ADHESIVE TAPE	1
6 *	FPC-1	1
7 174 989	CONTACT RUBBER (L)	1
8 174 A23	RS. CIRCUIT BOARD ASS'Y	1
9 *	DOUBLE ADHESIVE TAPE	1
10 174 858	LCD COVER	1
11 159 879	S. LIGHT-PROOF PLATE TAPE	2
12 174 856	TOP PRISM	1
13 63903526	F-LCD HOLDER S.S	2
14 174 854	F-LCD HOLDER	1
15 168 570	LIGHTING PANEL	1
16 174 A16	C. EXP. COMPENSATION SWITCH	1
17 174 A15	EXP. COMPENSATION SWITCH	1
18 63912526	FPC-1 S.S	3
19 63914026	FPC-1 S.S	1
20 61912022	FPC-1 S.S	1
21 63913022	R. BASE PLATE S.S	1
22 61914026	SHOE CONTACT HOLDER S.S	2
23 174 246	SHOE CONTACT SPRING (S)	1
24 174 247	SHOE CONTACT SPRING (L)	1
25 *	RELEASE BASE PLATE	1
26 63911526	RELEASE SWITCH NUT S.S	2
27 110 928	LEAD WIRE FIXER	1
28 174 245	SHOE CONTACT HOLDER	1
29 174 270	RELEASE SWITCH NUT	1
30 174 118	FLEXIBLE POST SCREW	1
31 *	ACETATE CLOTH TAPE	1
32 174 A22	B. CIRCUIT BOARD	1
1,11,12,14,15,		
174 A11	F-LCD HOLDER ASS'Y	1
6,8,9,23,24,		
174 A10	FPC-1 ASS'Y	1
25,26,29,		
174 A08	RELEASE BASE PLATE ASS'Y	1

PARTS MARKED * ARE NOT AVAILABLE

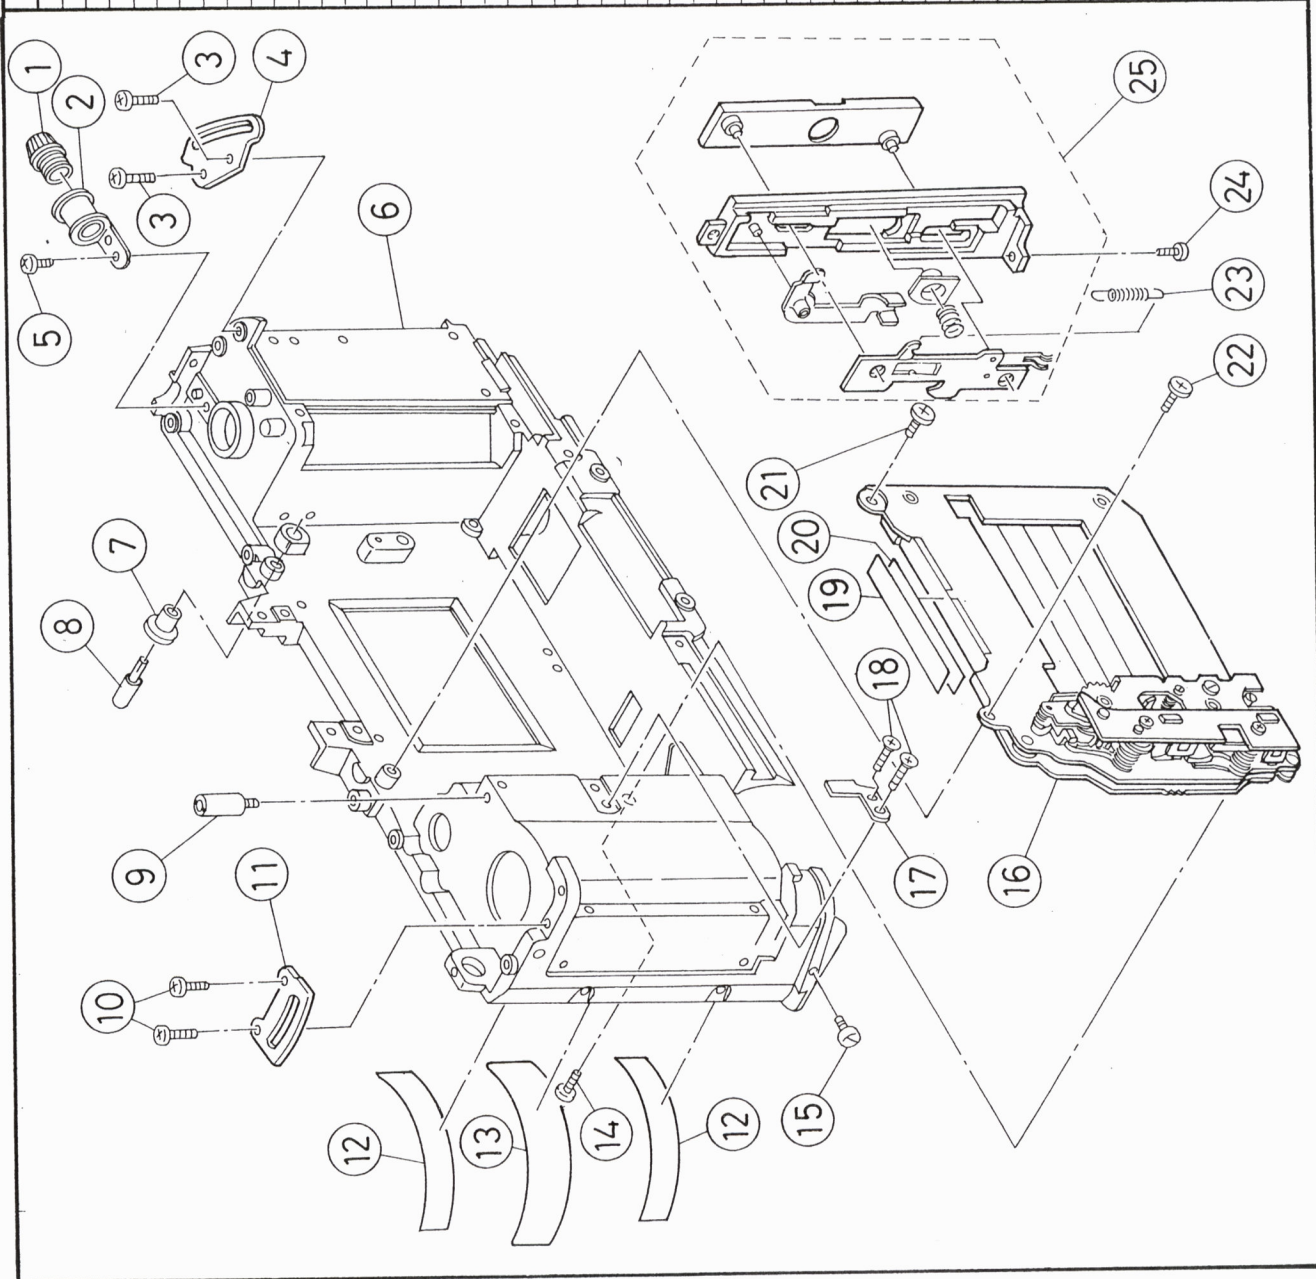


PARTS NO.	DESCRIPTION	QTY
1 139 138	SYNCHRO CAP	1
2 174 B12	SYNCHRO SOCKET ASS'Y	1
3 63925026	STRAP HOLDER PLATE S.S	2
4 174 105	STRAP HOLDER PLATE (RIGHT)	1
5 63913022	SYNCHRO SOCKET S.S	1
6 *	BODY	1
7 174 160	F. STOP PIN CASE	1
8 174 158	F. STOP PIN	1
9 174 444	F. FIXER SHAFT (L)	1
10 63925026	STRAP HOLDER PLATE S.S	2
11 174 106	STRAP HOLDER PLATE (LEFT)	1
12 174 448	SLIDE SEAL	2
13 174 445	SLIDE SEAL (2)	1
14 61924029	SHUTTER S.S	1
15 174 122	BOTTOM COVER GUIDE	1
16 174 A02	SHUTTER ASS'Y	1
17 174 944	FC SUPPORTER	1
18 61813026	FC SUPPORTER S.S	2
19 159 883	DUST PROOF TAPE	1
20 352 349	TAPE (2)	1
21 66001001	SHUTTER S.S	1
22 66001065	SHUTTER S.S	1
23 174 144	LOCK PLATE SPRING	1
24 63913526	LOCK PLATE NUT S.S	1
25 *	LOCK PLATE NUT ASS'Y	1
23, 25,		
174 A14	LOCK PLATE NUT ASS'Y	1

PARTS NO.	DESCRIPTION	QTY
1 174 104	BODY LIGHT-PROOF MOQUETTE	2
2 *	BODY	1
3 174 457	CARTRIDGE GUIDE	1
4 61913029	CARTRIDGE GUIDE S.S.	1
5 147 105	FILM GUIDE PIN	1
6 174 783	S. MOQUETTE (1)	1
7 174 A06	M. BASE PLATE (S) ASS'Y	1
8 61813026	M. BASE PLATE (S) S.S.	3
9 63911826	SPOOL HOLDER S.S.	3
10 174 382	SPOOL HOLDER	1
11 174 340	MOTOR	1
12 174 341	MOTOR CUSHION	1
13 174 381	SPOOL	1
14 69113576	SIDE COVER S.S.	2
15 174 149	SIDE MOQUETTE	2
16 174 117	FILM START MARK	1
17 174 154	HINGE COVER	1
18 174 155	HINGE MOQUETTE	1
19 174 451	FILM ROLLER SPRING	1
20 174 450	FILM ROLLER HOLDER	1
21 174 452	FILM ROLLER SHAFT	1
22 174 439	FILM GUIDE ROLLER	1
23 174 440	FILM FIXER	1
24 174 447	FILM GUIDE SPRING	1
25 174 441	FILM FIXER SHAFT	1
26 174 449	FILM ROLLER	1
27 174 371	SPROCKET	1
28 174 446	FILM GUIDE	1
29 63913026	FILM GUIDE S.S.	2
15-21, 26,		
174 B17	HINGE COVER ASS'Y	1
22-25, 28,		
174 B11	FILM FIXER ASS'Y	1

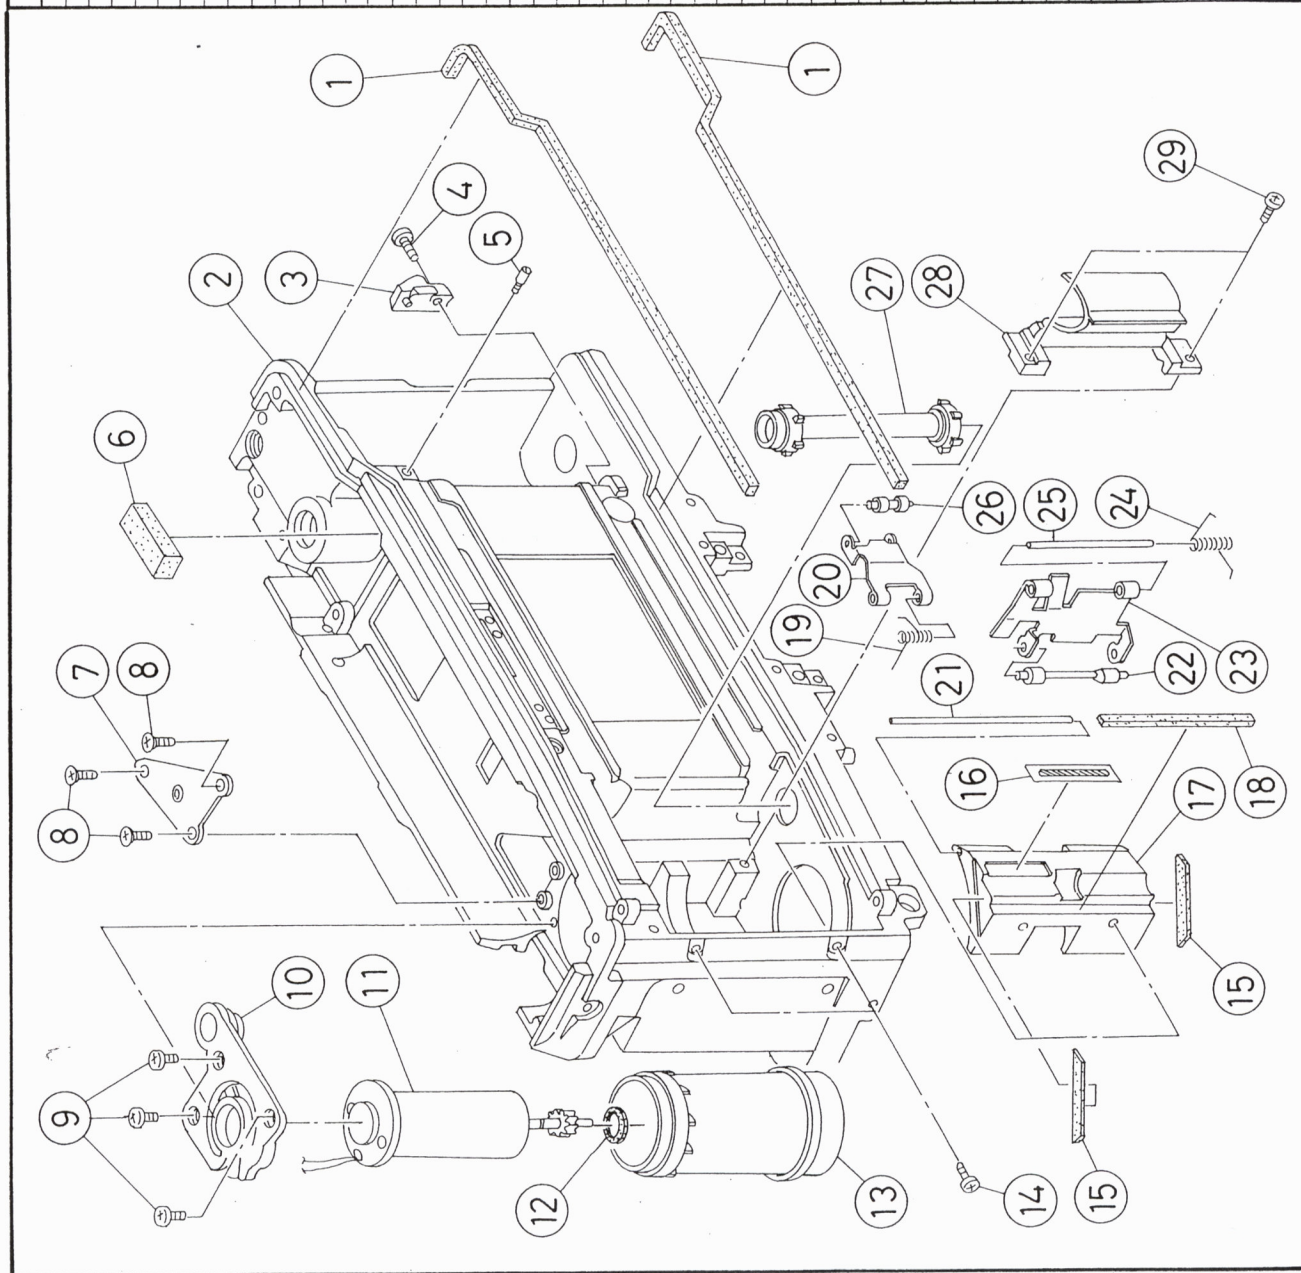



PARTS MARKED * IS NOT AVAILABLE

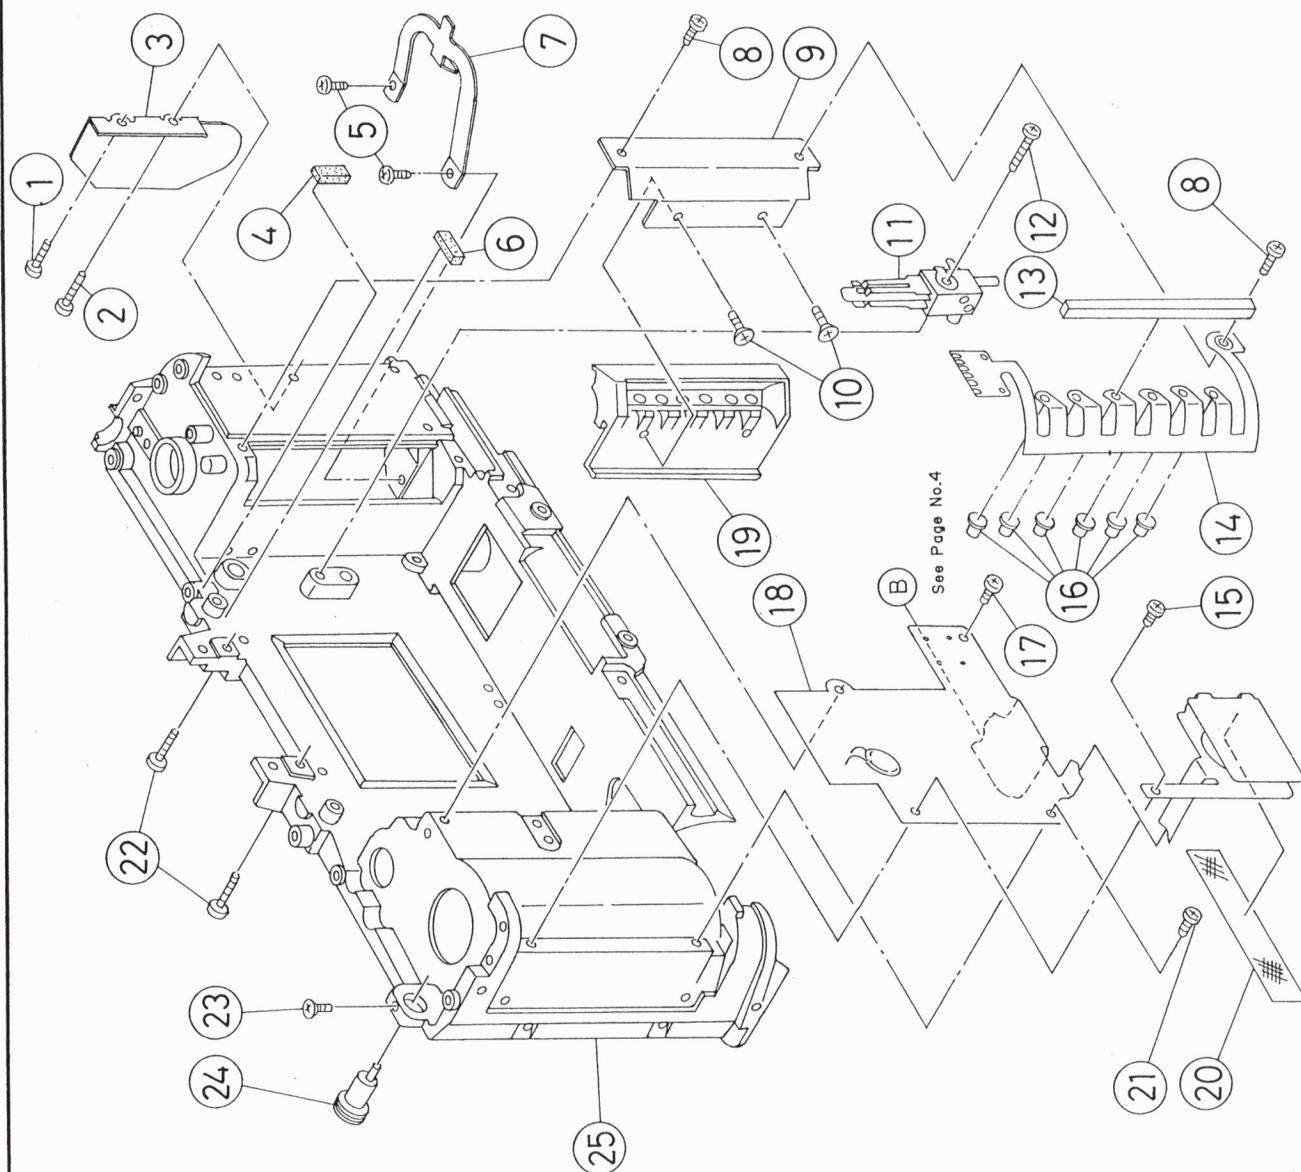[illegible]

PARTS MARKED * ARE NOT AVAILABLE


PARTS NO.	DESCRIPTION	QTY
1 174 B28	F. SET CAM	1
2 174 418	TIMING SWITCH LEVER SPRING	1
3 174 B29	TIMING SWITCH LEVER ASS'Y	1
4 66101525	E RING (E-15)	1
5 63904022	TIMING SWITCH S.S	1
6 174 C22	TIMING SWITCH ASS'Y	1
7 66001042	S. BASE PLATE (L) S.S	2
8 61813026	S. BASE PLATE ASS'Y S.S	2
9 174 B30	S. SET LEVER ASS'Y	1
10 174 B31	F. SET LEVER ASS'Y	1
11 174 B32	F. SET LEVER PLATE ASS'Y	1
12 61803526	F. SET LEVER PLATE S.S	2
13 63914026	RW SWITCH S.S	1
14 174 C21	RW SWITCH ASS'Y	1
15 174 426	R. LEVER SHAFT (L)	1
16 174 428	RW LEVER SPRING	1
17 63913022	S. BASE PLATE S.S	1
18 174 B27	S. BASE PLATE (L) ASS'Y	1
19 66101225	E RING (E-12)	1
20 174 B23	S. GEAR-4 ASS'Y	1
21 66001042	M. PINION S.S	1
22 174 421	M. PINION	1
23 137 339	CLUTCH ROLLER	3
24 137 340	ROLLER SPRING	3
25 66101225	E RING (E-12)	1
26 174 358	CLUTCH GEAR (S)	1
27 137 341	ROLLER HOLDER PLATE	1
28 137 356	WINDING CLUTCH PLATE	1
29 174 353	CLUTCH GEAR (L)	1
30 174 361	R. CLUTCH GEAR (S)	1
31 174 B26	S. GEAR-3 ASS'Y	1
32 174 B25	S. GEAR-2 ASS'Y	1
33 66101525	E RING (E-15)	1
34 174 342	FRICTION WASHER	1
35 174 343	FRICTION SPRING	1
36 174 346	S. GEAR (1-S)	1
37 174 345	S. GEAR (1-L)	1
38 174 344	S. GEAR-1 SHAFT	1
39 174 B21	S. BASE PLATE (S) ASS'Y	1
40 174 378	SPOOL GEAR	1
41 174 379	SPOOL SPRING	1
42 174 370	SPROCKET GEAR	1
43 174 422	M. PINION SHAFT	1
44 174 616	M. GEAR-1	1
23-29,		
174 B22	WINDING CLUTCH GEAR ASS'Y	1
33-38,		
174 B24	S. FRICTION GEAR ASS'Y	1
40, 41		
174 A03	SPOOL FRICTION ASS'Y	1
1-4, 7, 9-12, 15, 16, 18-39, 43,		
174 A04	S. BASE PLATE ASS'Y	1

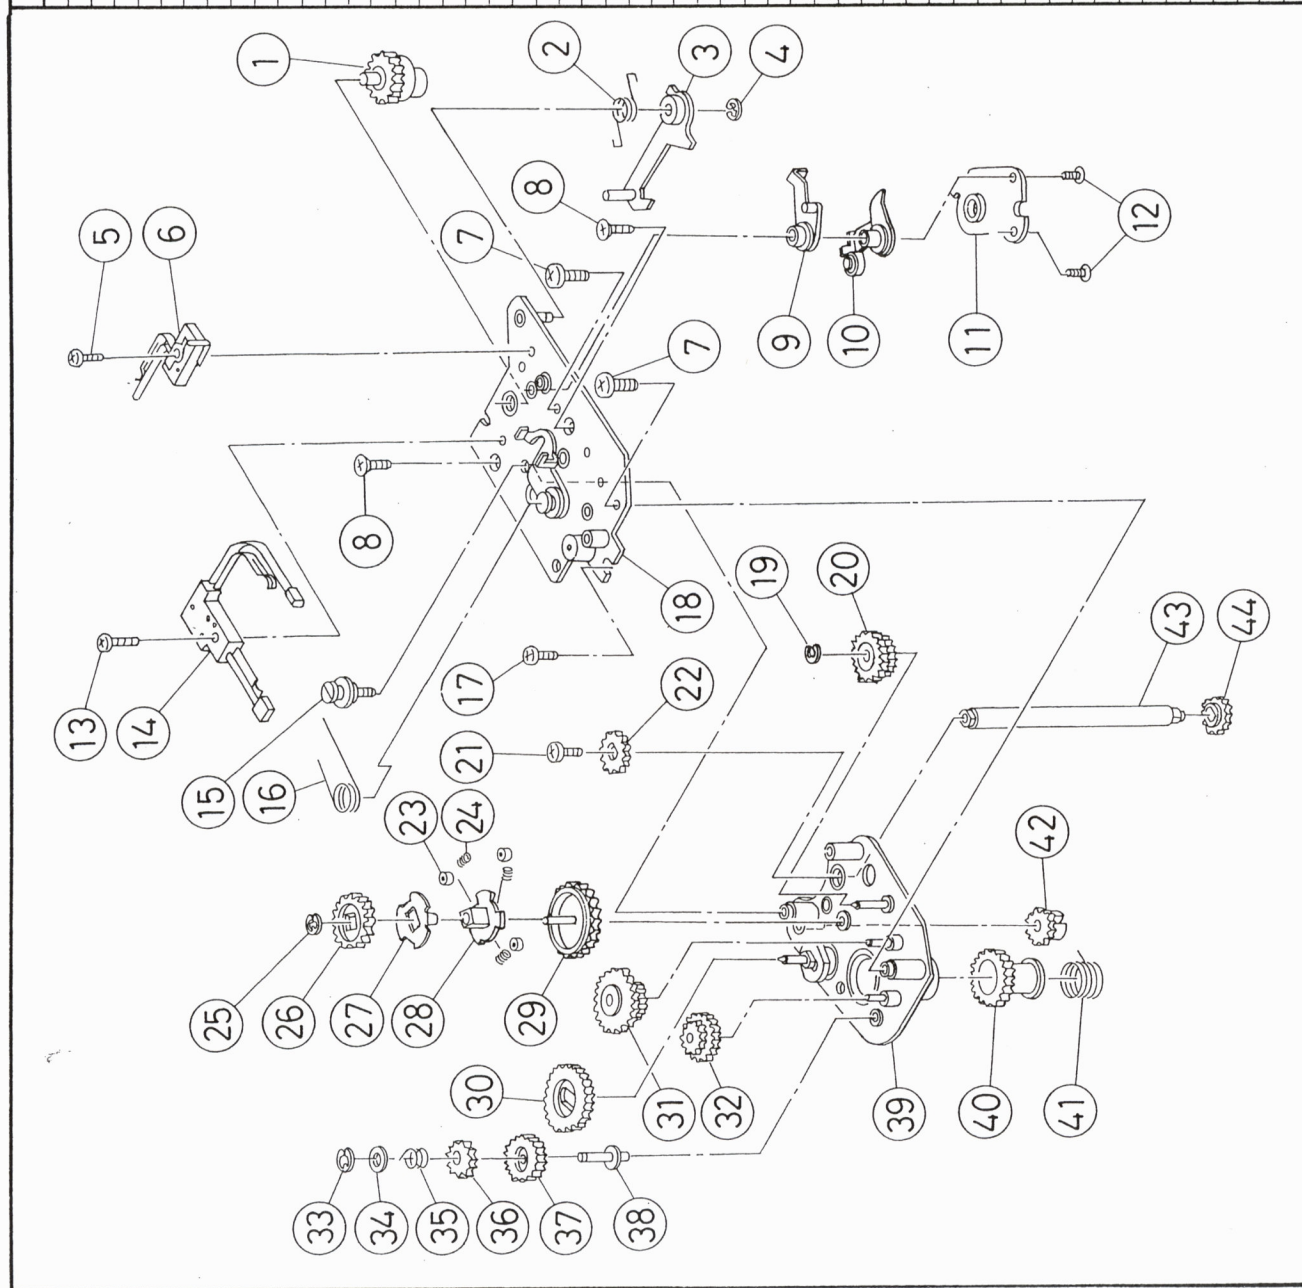

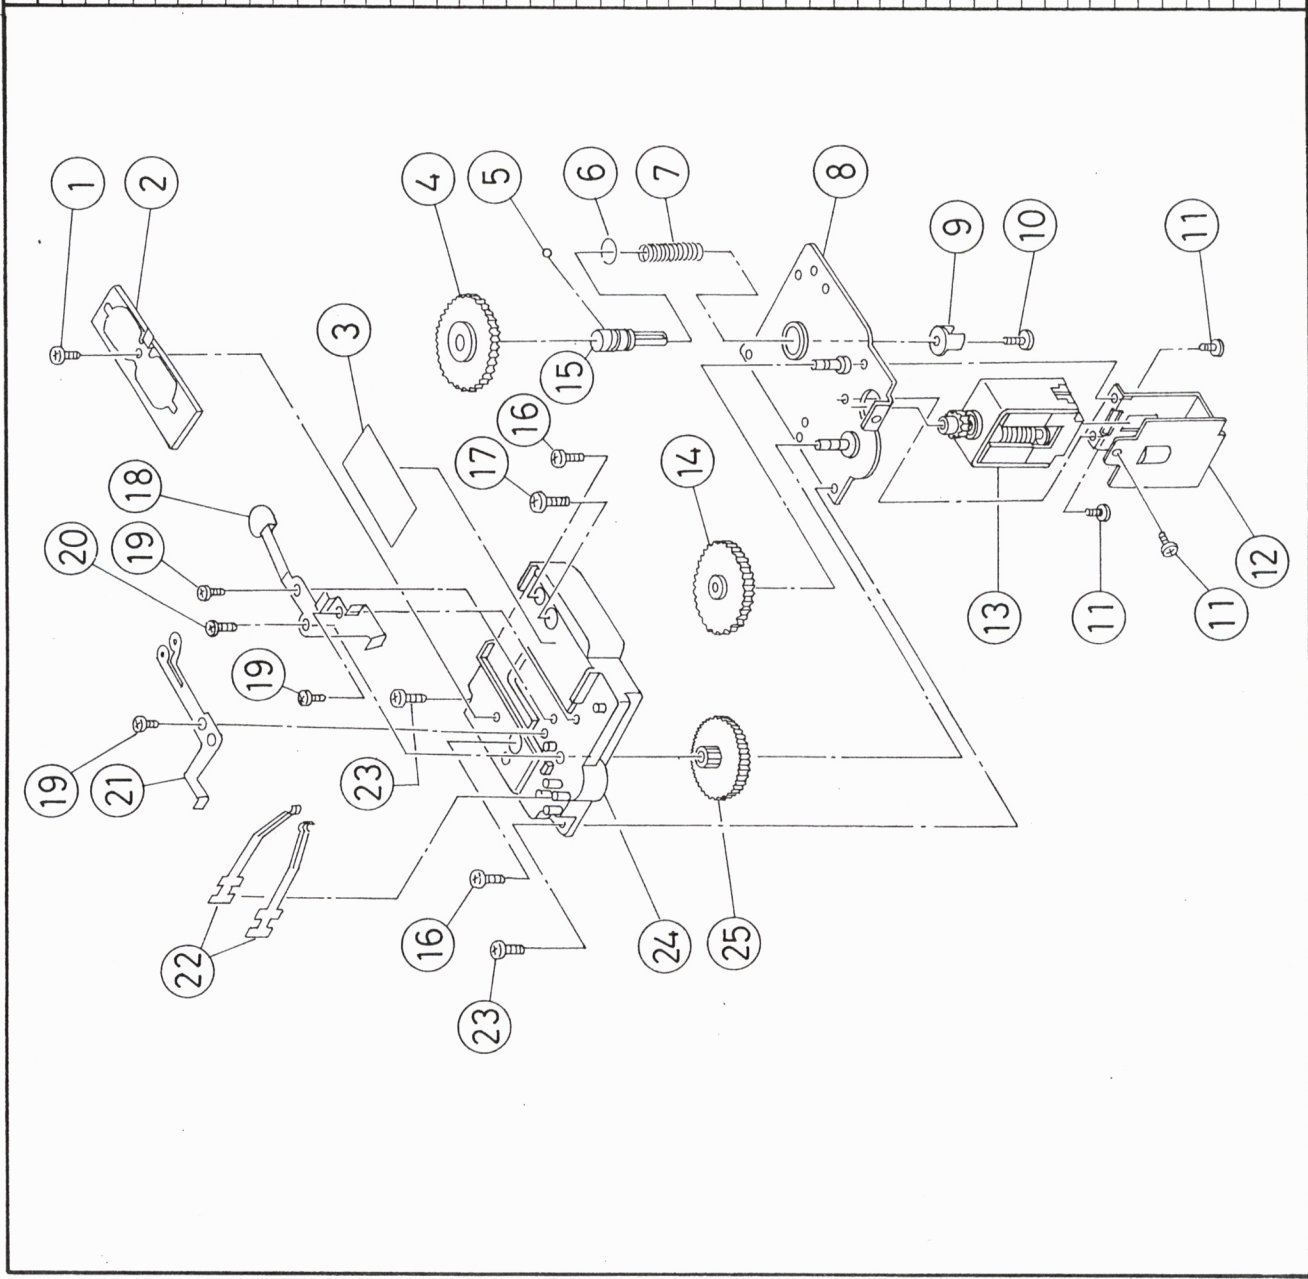

PARTS NO.	DESCRIPTION	QTY
1 63912526	MODE SWITCH NUT S.S	1
2 174 470	MODE SWITCH UNIT	1
3 174 985	LCD TAPE	1
4 174 971	RM SHAFT GEAR	1
5 66701220	STEEL BALL (ø1.2)	1
6 174 975	RM SHAFT CLIP	1
7 174 978	RM SHAFT SPRING	1
8 *	RM BASE PLATE ASS'Y	1
9 174 974	RM SHAFT (S)	1
10 6601050	RM SHAFT (S) S.S	1
11 63901526	RM HOLDER S.S	3
12 174 961	RM HOLDER	1
13 174 B64	REWIND MOTOR ASS'Y	1
14 174 970	RM GEAR (S)	1
15 174 973	RM SHAFT (L)	1
16 63913526	REWIND MOTOR CASE S.S	2
17 63913522	REWIND NUT S.S	1
18 174 982	REWIND MOTOR SWITCH (L)	1
19 6601038	REWIND MOTOR SWITCH S.S	3
20 63912022	REWIND MOTOR CASE S.S	1
21 174 983	REWIND MOTOR SWITCH (S)	1
22 174 986	MODE CONTACT	2
23 63913526	REWIND NUT S.S	2
24 174 981	REWIND MOTOR CASE	1
25 174 969	RM GEAR (L)	1
6,7,9,10,15,		
174 B62	RM SHAFT ASS'Y	1
4-16,18-22,24,25,		
174 A07	REWIND NUT ASS'Y	1

PARTS NO.	DESCRIPTION	QTY
1 159 862	PENTA PRISM FIXER	1
2 174 842	PENTA PRISM COVER	1
3 174 841	PENTA PRISM	1
4 174 843	FINDER MASK FRAME	1
5 174 845	PENTA SPACER	1
6 63914026	PENTA PRISM HOLDER S.S	4
	SELECT WASHER	
7 139 874	FOCUS ADJUST WASHER (t0.3)	4
139 840	FOCUS ADJUST WASHER (t0.4)	4
139 871	FOCUS ADJUST WASHER (t0.5)	4
139 894	FOCUS ADJUST WASHER (t0.6)	4
139 898	FOCUS ADJUST WASHER (t0.7)	4
8 174 C67	PENTA PRISM HOLDER ASS'Y	1
9 139 858	PENTA DUST-PROOF MOQUETTE	2
10 174 849	FOCUSING GLASS	1
11 174 860	PG HOLDER	1
12 174 850	F. MIRROR FRAME	L
13 178 852	F. MIRROR	1
14 174 851	F. PRISM	1
15 174 870	FRAME TAPE (L)	1
16 174 862	PG HINGE SHAFT	1
17 174 852	F. MIRROR	1
18 174 859	F. MIRROR ADJUSTER	1
19 174 248	PRISM BASE	1
20 168 886	EX PRISM	1
21 174 252	EX ADJUSTER SPRING	1
22 66001061	EX ADJUSTER SCREW	1
23 61914026	EYE-PIECE HOLDER S.S	2
24 174 254	EYE-PIECE HOLDER	1
25 168 A78	EYE-PIECE LENS	1
26 174 255	EYE-PIECE FRAME	1
27 61914026	EYE-PIECE FRAME S.S	2
28 174 253	EX ADJUSTER	1
29 174 249	EX ADJUSTER BASE	1
30 69114576	EX ADJUSTER BASE S.S	2
31 174 C70	EX BOARD ASS'Y	1
32 69113576	EX BOARD S.S	2
17, 18,		
174 E61	F. MIRROR ADJUSTER ASS'Y	1
3, 12-15, 17, 18,		
174 C68	PENTA PRISM ASS'Y	1
19, 20,		
174 D71	EX PRISM ASS'Y	1
19-22, 24, 25,		
174 C69	EYE-PIECE HOLDER ASS'Y	1
19-22, 24, 25, 28-32,		
174 B53	EYE-PIECE ASS'Y	1
1-25, 28-32,		
174 A05	MIRROR BOX ASS'Y	1
	(SEE PAGE NO.12,13,14,15)	

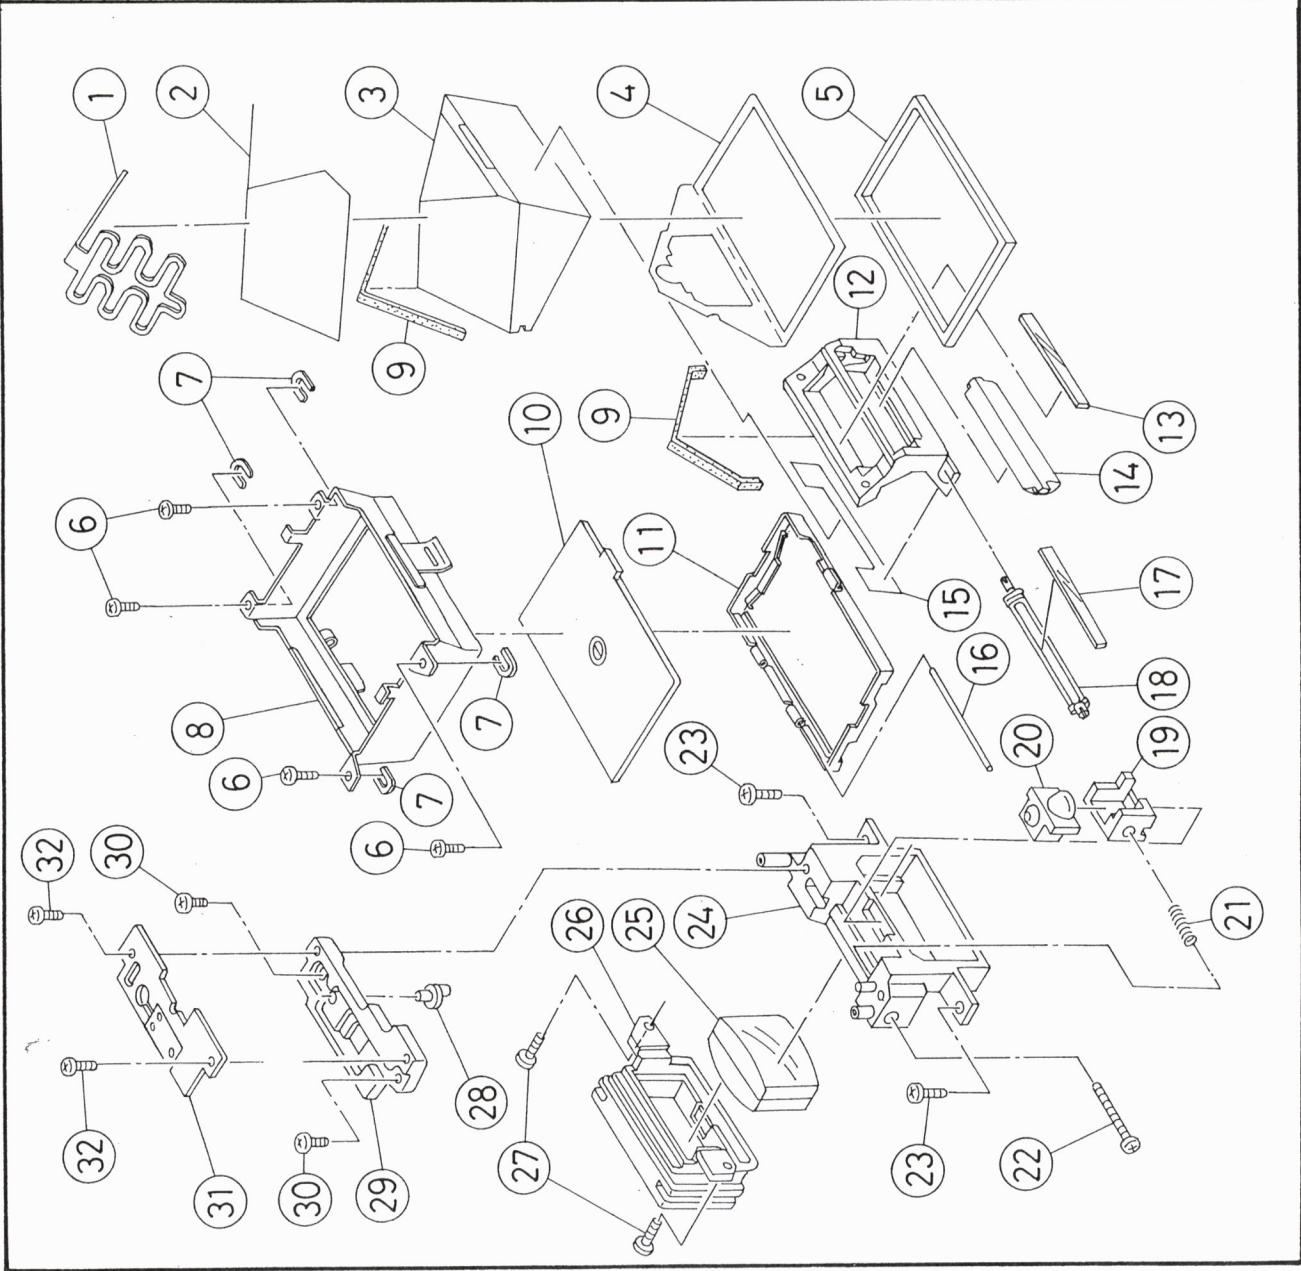


PARTS NO.	DESCRIPTION	QTY
1 174 706	FS RING SHAFT-1	3
2 174 728	FC ROLLER (M)	4
3 61913026	MOUNT SPRING S.S	6
4 139 812	MOUNT SPRING	3
5 139 813	MOUNT STOPPER	1
6 61913026	MOUNT STOPPER S.S	2
7 174 721	FC DRIVING SPRING	1
8 174 713	FS ROLLER	2
9 66101225	E RING (E-12)	4
10 174 705	FS RING	1
11 174 714	FS RING WASHER	2
12 174 709	FS ROLLER (L)	2
13 61912026	FS STOPPER S.S	2
14 174 710	FS STOPPER	1
15 174 C41	FC RING ASS'Y	1
16 174 720	SP GUARD	1
17 61801826	SP GUARD S.S	2
18 174 803	MIRROR CUSHION	2
19 *	MIRROR BOX	1
20 139 815	LOCK LEVER	1
21 174 731	LOCK LEVER SPRING	1
22 139 816	LOCK LEVER SHAFT	1
23 142 810	BODY MOUNT	1
24 131 177	BODY MOUNT S.S	4
25 *	BODY CAP	1
1-24,		
174 A05	MIRROR BOX ASS'Y (SEE PAGE NO.11,13,14,15)	1


PARTS NO.	DESCRIPTION	QTY
1 174 750	FS PLATE MYLER	1
2 174 747	FS CODE BASE ASS'Y	1
3 61912022	FS CODE PLATE S.S	2
4 174 C58	FS CODE PLATE ASS'Y	1
5 174 677	S. LEVER HOOK SPRING	1
6 66001042	S. LEVER HOOK S.S	1
7 174 C49	S. LEVER HOOK ASS'Y	1
8 174 661	S. LEVER SPRING	1
9 61912026	MU BASE PLATE S.S	2
10 174 670	MU LEVER SPRING	1
11 66001033	MU LEVER (M) S.S	1
12 *	MU BASE PLATE	1
13 174 784	S. MOQUETTE (2)	1
14 174 943	FC. UNIT HOLDER	1
15 174 C59	FS PLATE ASS'Y	1
16 141 811	OPEN APERTURE SIGNAL SPRING	1
17 *	MIRROR BOX	1
18 174 801	MIRROR	1
19 139 774	MIRROR ADHESIVE TAPE	1
20 63913026	FC UNIT HOLDER S.S	2
21 174 C66	PHOTO-COUPLER ASS'Y	1
22 174 941	FC SLIT (F)	1
23 61902526	FC SLIT (F) S.S	1
24 66001039	FC UNIT S.S	2
25 *	MENDING TAPE	1
26 *	FC BASE PLATE ASS'Y	1
27 159 742	REDUCTION GEAR	1
28 159 744	ANCHOR	1
29 174 C64	FC SET LEVER ASS'Y	1
30 174 C62	FC CHARGE LEVER	1
31 174 942	FC MAGNET	1
32 66001087	FC MAGNET S.S	1
33 66101225	E RING (E-12)	1
34 174 931	FC CHARGE SPRING	1
35 66100825	E RING (E-8)	1
36 174 C63	FC SLIT ASS'Y	1
37 174 928	FC SET SPRING	1
38 174 C65	FC STOPPER ASS'Y	1
39 174 924	FC STOPPER LEVER SPRING	1
40 168 853	MOVABLE PIECE TAPE	1
41 174 B44	MIRROR FRAME ASS'Y	1
1-4,15,16, 174 B49	FS CODE BASE PLATE ASS'Y	1
5-8,10-12, 174 B45	MU BASE PLATE ASS'Y	1
21-23,25-40, 174 B50	FC UNIT ASS'Y	1
1-41, 174 A05	MIRROR BOX ASS'Y (SEE PAGE NO.11,12,14,15)	1

PARTS MARKED * ARE NOT AVAILABLE


PARTS NO.	DESCRIPTION	QTY
1	MIRROR BOX	1
2 63901526	M. HINGE PLATE (RIGHT) S.S	1
3 61802026	M. HINGE PLATE (RIGHT) S.S	1
4 174 B46	M. HINGE PLATE (RIGHT) ASS'Y	1
5 174 784	S. MOQUETTE (2)	1
6 131 747	D. OPERATION LEVER SPRING	1
7 66101225	E RING (E-12)	1
8 174 738	AV GEAR (S)	1
9 174 D31	AV GEAR (S) SHAFT ASS'Y	1
10 61813026	AV GEAR (S) S.S	1
11 *	THETA BASE PLATE	1
12 61912522	THETA BASE PLATE S.S	1
13 174 762	THETA SPRING	1
14 61801826	MOVABLE RING SHAFT S.S	2
15 174 C40	MOVABLE RING SHAFT ASS'Y	1
16 174 C43	AV BASE SUB ASS'Y	1
17 110 928	LEAD WIRE FIXER	1
18 63912022	AV BASE S.S	1
19 174 C44	AV CONTACT ASS'Y	1
20 66101525	E RING (E-15)	1
21 139 831	AV SPRING	1
22 *	MU BASE	1
23 174 772	MU SWITCH (L)	1
24 63912022	MU BASE ASS'Y	1
25 63912226	AV BASE S.S	1
26 61912226	45° LEVER S.S	1
27 66001083	45° ADJUSTING S.S	1
28 174 B47	45° LEVER ASS'Y	1
29 174 826	45° SPRING	1
30 174 827	45° SPRING SHAFT	1
7-9,		
174 C42	AV GEAR (S) ASS'Y	1
11,13,		
174 A12	THETA BASE PLATE ASS'Y	1
16,19,20,21,		
174 B42	AV BASE ASS'Y	1
22,23,		
174 B43	MU BASE ASS'Y	1
1-10,14-30,		
174 A05	MIRROR BOX ASS'Y (SEE PAGE NO.11,12,13,15)	1

PARTS MARKED * ARE NOT AVAILABLE

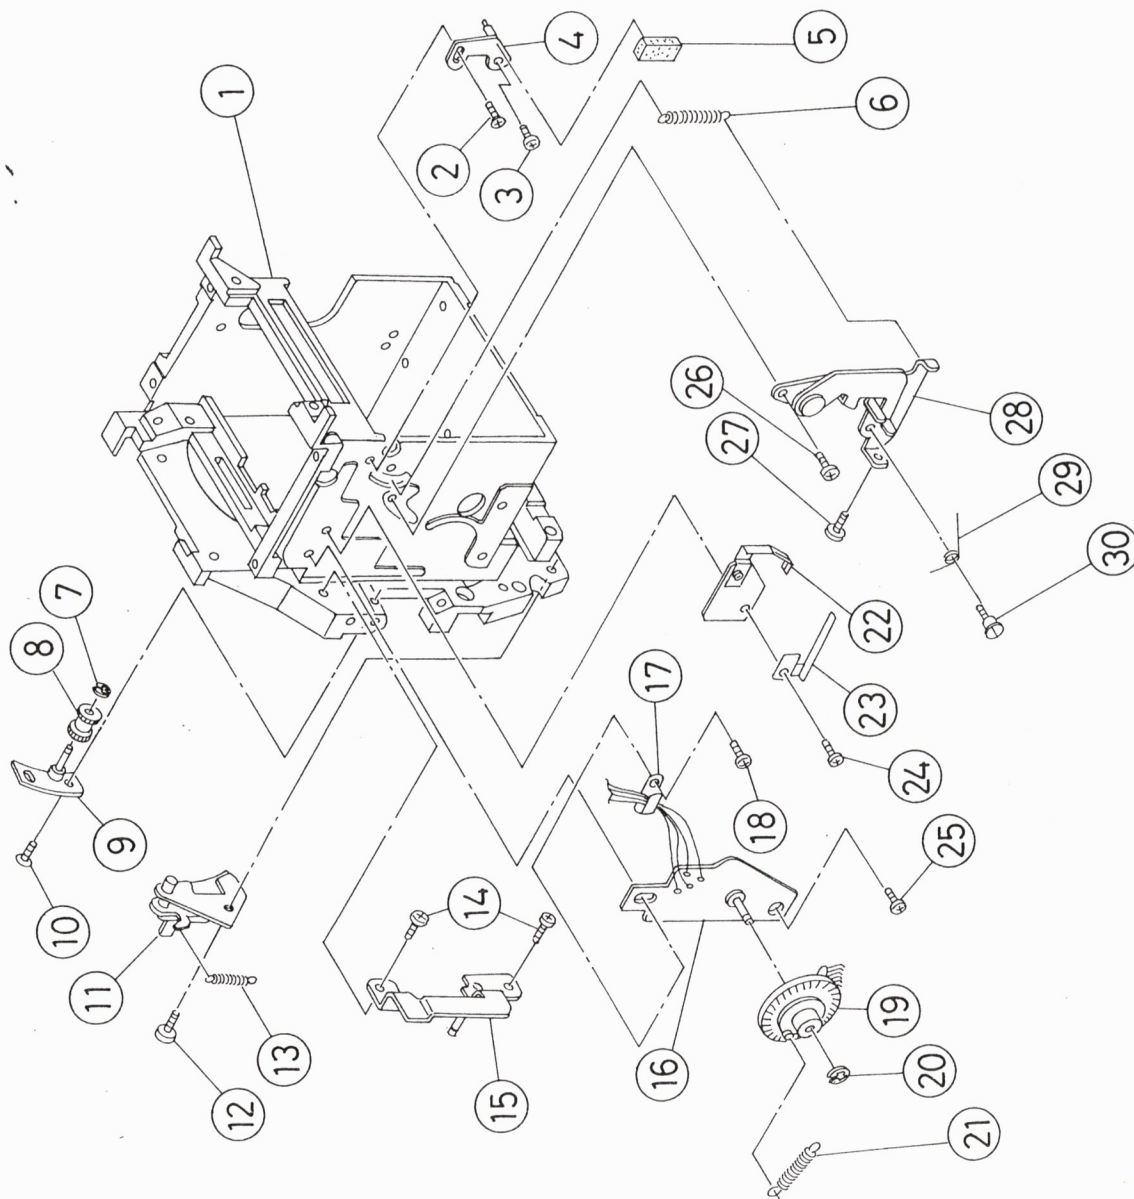

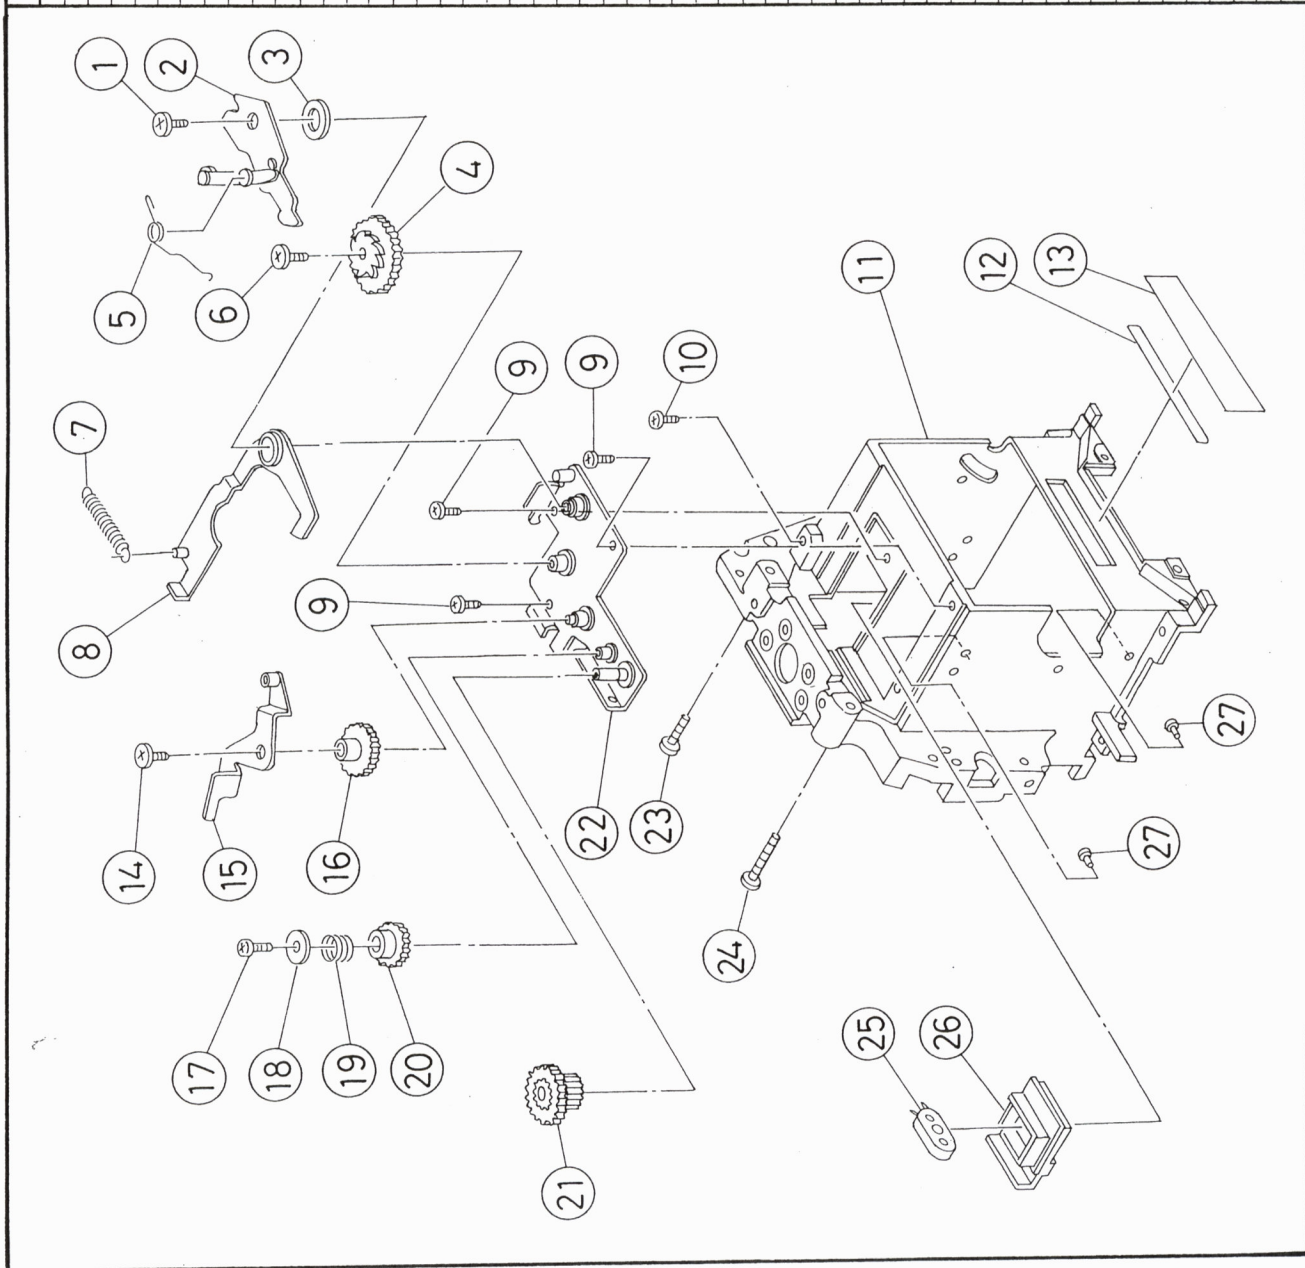[illegible]

PARTS NO.	DESCRIPTION	QTY
1 137 527	CAPACITOR (100PF) C11	1
2 137 527	CAPACITOR (100PF) C10	1
3 137 506	X'tal OSCILLATOR	1
4 159 551	CAPACITOR (0.1u) C9	1
5 174 533	RESISTOR (43K ohm) R6	1
6 174 533	RESISTOR (43K ohm) R8	1
7 159 568	RESISTOR (10K ohm) R7	1
8 174 542	RESISTOR (6.2K ohm) R5	1
9 174 545	VARIABLE RESISTOR (10K ohm) Ra4	1
10 174 545	VARIABLE RESISTOR (10K ohm) Ra3	1
11 159 556	RESISTOR (1K ohm) R27	1
12 174 546	TRANSISTOR Tt5	1
13 174 546	TRANSISTOR Tt17	1
14 174 528	RESISTOR (36 ohm) R25	1
15 174 546	TRANSISTOR Tt16	1
	SELECT CAPACITOR	
16 174 524	CAPACITOR (560PF) C8	1
174 523	CAPACITOR (680PF) C8	1
174 526	CAPACITOR (750PF) C8	1
174 538	CAPACITOR (820PF) C8	1
17 174 528	RESISTOR (36 ohm) R28	1
18 174 542	RESISTOR (6.2K ohm) R12	1
19 137 528	CAPACITOR (1000PF) C16	1
20 174 543	VARIABLE RESISTOR (6.8K ohm) Ra5	1
21 174 546	TRANSISTOR Tt18	1
22 159 556	RESISTOR (1K ohm) R27	1
23 174 544	VARIABLE RESISTOR (100K ohm) Ra1	1
24 159 568	RESISTOR (10K ohm) R2	1
25 137 528	CAPACITOR (1000PF) C2	1
26 159 562	RESISTOR (47K ohm) R3	1
27 174 545	VARIABLE RESISTOR (10K ohm) Ra2	1
28 174 519	DIODE D7	1
29 159 556	RESISTOR (1K ohm) R16	1
30 174 547	TRANSISTOR Tt4	1
31 360 542	TRANSISTOR Tt19	1
32 174 553	CAPACITOR (15000PF) C7	1
33 137 528	CAPACITOR (1000PF) C6	1
34 174 55010	CAPACITOR (3.3u) C15	1
35 174 549	DIODE D6	1
36 174 517	TRANSISTOR Tt31	1
37 174 531	RESISTOR (300 ohm) R22	1
38 159 558	RESISTOR (180 ohm) R4	1
39 159 555	CAPASISTOR (0.15u) C18	1
40 174 546	TRANSISTOR Tt3	1
41 161 536	CAPASISTOR (1u) C5	1
42 159 562	RESISTOR (47K ohm) R21	1
43 159 562	RESISTOR (47K ohm) R20	1
44 174 536	RESISTOR (120K ohm) R18	1
45 174 536	RESISTOR (120K ohm) R29	1
46 159 568	RESISTOR (10K ohm) R39	1
47 159 555	CAPASISTOR (0.15u) C13	1
48 159 555	CAPASISTOR (0.15u) C13	1
49 159 562	RESISTOR (47K ohm) R19	1
50 174 519	DIODE D8	1
51 174 546	TRANSISTOR Tt29	1
52 161 536	CAPASISTOR (1u) C1	1
53 174 536	RESISTOR (120K ohm) R30	1
53 *	FPC-1	1
1-54,		
174 A10	FPC-1 ASS'Y	1

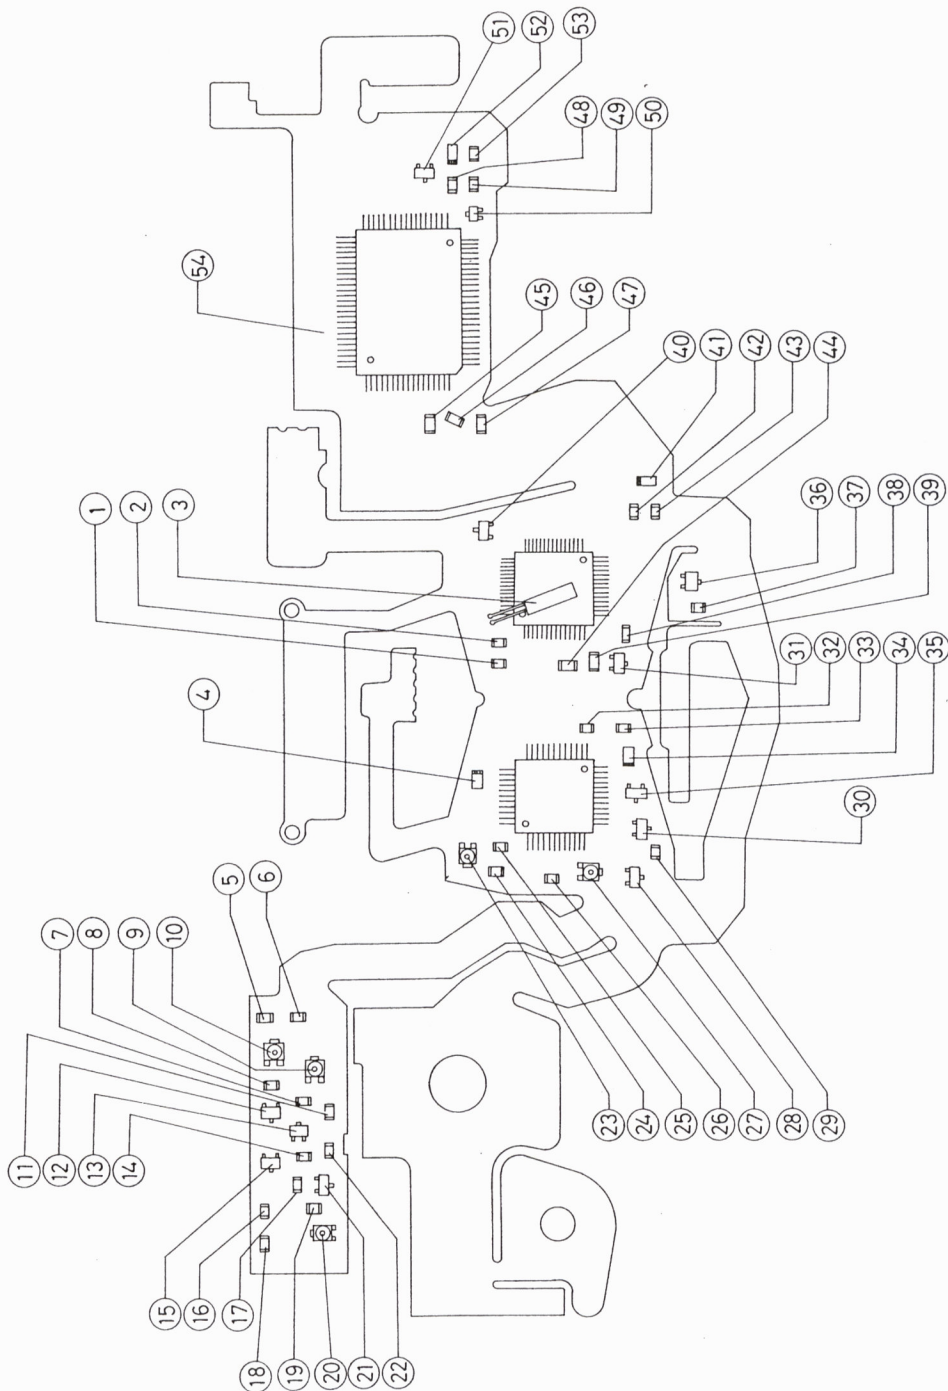

PARTS NO.	DESCRIPTION	QTY
1 358 522	RESISTOR (100 ohm) R35	1
2 174 517	TRANSISTOR Tr20	1
3 174 515	TRANSISTOR Tr21	1
4 174 513	POWER TRANSISTOR Tr23	1
5 174 512	POWER TRANSISTOR Tr25	1
6 174 515	TRANSISTOR Tr26	1
7 159 568	RESISTOR (10K ohm)	1
8 174 517	TRANSISTOR Tr27	1
9 174 519	DIODE D4	1
10 174 517	TRANSISTOR Tr14	1
11 174 542	RESISTOR (6.2K ohm) R15	1
12 174 529	RESISTOR (47 ohm) R13	1
13 159 568	RESISTOR (10K ohm) R36	1
14 174 534	RESISTOR (51K ohm) R14	1
15 137 528	CAPACITOR (1000pF) C3	1
16 174 515	TRANSISTOR Tr8	1
17 174 517	TRANSISTOR Tr7	1
18 174 515	TRANSISTOR Tr30	1
19 174 510	DC-DC COIL	1
20 159 556	RESISTOR (1K ohm) R11	1
21 174 546	TRANSISTOR Tr1	1
22 174 517	TRANSISTOR Tr6	1
23 160 521	TRANSISTOR Tr28	1
24 159 556	RESISTOR (1K ohm) R31	1
25 159 568	RESISTOR (10K ohm) R37	1
26 139 508	CAPACITOR C14	1
27 174 515	TRANSISTOR Tr13	1

PARTS NO.	DESCRIPTION	QTY
28 174 519	DIODE D3	1
29 174 512	POWER TRANSISTOR Tr12	1
30 174 513	POWER TRANSISTOR Tr11	1
31 358 522	RESISTOR (100 ohm) R32	1
32 174 512	POWER TRANSISTOR Tr9	1
33 174 513	POWER TRANSISTOR Tr10	1
34 358 522	RESISTOR (100 ohm) R13	1
35 174 521	ZENER DIODE	1
36 174 530	RESISTOR (750 ohm) R17	1
37 174 551	CAPACITOR (10u) C4	1
38 174 519	DIODE D4	1
39 137 114	SELF-TIMER LED	1
40 174 520	DIODE D5	1
41 168 524	BACK UP BATTERY (BR1225)	1
42 174 518	TRANSISTOR Tr2	1
43 174 517	TRANSISTOR Tr5	1
44 358 522	RESISTOR (100 ohm) R34	1
45 174 513	POWER TRANSISTOR Tr24	1
46 174 512	POWER TRANSISTOR Tr22	1
47 159 568	RESISTOR (10K ohm) R10	1
48 *	FPC-2	
1-40, 42-48,		
174 A09		1
FPC-2 Ass'y		

PARTS MARKED * IS NOT AVAILABLE

